

Sand Bags for Tent Legs

Double-chamber sand bags for anchoring pop-up tents on hard surfaces



Sand bag fastened to a tent leg

Water-resistant double-chamber bags that you fill with sand or gravel on site. Each filled bag weighs about 14 kg and wraps around one tent leg with Velcro straps in a few seconds.

Weight filled	approx. 14 kg per bag
Filling	sand or gravel (not included)
Sets	4 or 6 pieces
Fastening	Velcro straps around the leg
Wind	for wind up to 40 km/h (with all legs anchored)

Package contents

- Empty sand bags according to the ordered set (4 or 6 pieces)

Installation and use

- 1 Fill the bag**
Open the zip of each chamber and fill it with dry sand or fine gravel. Leave a little space so the zip closes easily, then close it completely.
- 2 Place the bag**
Put the bag next to the tent leg so that the leg sits between the two chambers.
- 3 Fasten**
Wrap the Velcro straps tightly around the leg and press them firmly together.
- 4 Every leg**
Use one bag on every leg of the tent.
- 5 Check**
Pull the bag gently to check it is tight and does not slide down the leg.



Filled with sand: approx. 14 kg

Safety instructions

For this product

- The bags are designed for wind up to 40 km/h. Above that, or before a storm, take the tent down.
- A filled bag weighs about 14 kg – lift with your knees and carry it by the bag, not by the straps.
- Do not overfill the bags – the zip can break.
- Bags at the legs can be a tripping hazard – mark them in public areas.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Empty the bags after use, clean them with water and let them dry before storing.
- Store away from direct sunlight and sharp objects.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.